
www.kronakoblenz.com

**Assembling Instructions** 


**Evolution series** K1019 HYBRID


**Evolution series** K1060 HYBRID

PATENTED MADE IN ITALY

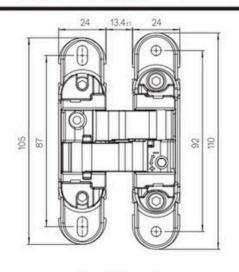

13.4:1

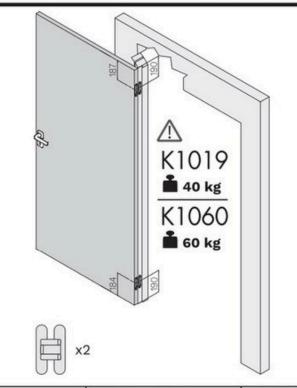

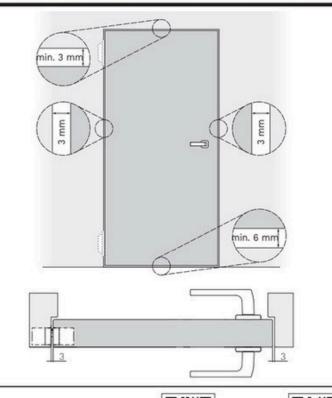



Covers standard fixing

Door side

TOIC Ø4.5X MIN.30mm DIN7505-B TCIC Ø4.5X MIN.20mm DIN7505-B TCIC M4X MIN.36mm UNI7687 DIN7985

TOIC Ø3.5X MINJ6mm DIN7505-B

## Screws

Covers magnetic fixing


-TSRIC Ø5X min.20 DIN 7505-A -TSPIC M5X min.20 UNI 7688 DIN 965 -TSPEI M5X min.20 UNI 5933 DIN 7991

-TCIC Ø4.5X min.30 DIN7505-8 -TCIC M4X min.20 UNI 7687

-TCI M4X min.20 UNI 6107

Jamb side


-TSPIC M5X min.20 UNI 8113 DIN 7500-M -TSPIC 24.8X min.19 UNI 6955-AB -TSPIT 24.8X min.19 UNI 6952-AB

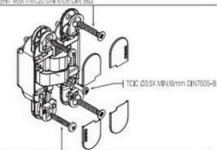


-TCE| M4X min.20 UN| 9327 -TCIC Ø4.2X min.20 UNI 6964 AB -TCIC Ø4.2X min.19 UNI 8118 -TCIIC M4X min.20 UNI 8112 DIN 7500-C -TBEI M4X min.20 ISO 7380

# Installation

Hinge centered on the door leaf



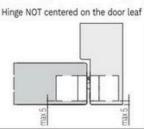

### NOTE

#### Product info

For additional information view the website or product catalogue.

### Certification

View product certifications in the catalogue or on the website.



catalogue

A Specific warnings



- Double the upper hinge whether a door closer is used;
- Double the bottom hinge whether a door stop or drop down seal is used;
  Place a central hinge whether the door leaf is higher than 2100 mm.



